

## Maintenance Schedule

Distance (kms)	Time (Months)	Service
5,000	3	1
10,000	6	2
15,000	9	1
20,000	12	3
25,000	15	1
30,000	18	2
35,000	21	1
40,000	24	3
45,000	27	1
50,000	30	4
55,000	33	1
60,000	36	3
65,000	39	1
70,000	42	2
75,000	45	1
80,000	48	3
85,000	51	1

90,000	54	2
95,000	57	1
100,000	60	4+3

### Special Operating Conditions

- Off-road use.
- You tow a trailer or use a camper or car-top carrier.
- Most trips include extensive idling such as frequent driving in stop-and-go traffic.
- You carry heavy loads.
- Your vehicle is used for delivery service, police, taxi, or other commercial application.
- You operate in dusty conditions such as unpaved or dusty roads.
- You operate the vehicle off-road in water that is deeper than the hubs (1/2 wheel height) or in extremely muddy conditions. Affected components must be serviced daily.
- If your vehicle is equipped with a Vehicle Maintenance Monitor (VMM) change oil and filters when indicated by VMM, but do not go beyond 6 months.

If you presently operate your vehicle in any of the more demanding "[Special Operating Conditions](#)" listed above, perform oil and filter changes every 3 months or 5,000 km and automatic transmission fluid and filter changes every 30 months or 50,000 km. Replace fuel filters every 20,000 km, transfer case fluid every 100,000 km, platinum spark plugs every 100,000 km, and PCV valve every 100,000 km. NOTE: If you only occasionally operate your vehicle in these conditions, it is not necessary to perform this additional maintenance.

### Service #1

- Change engine oil and replace oil filter
- Multi-point inspection
- Inspect air filter minder (diesel)

## Service #2

- Change engine oil and replace oil filter
- Multi-point inspection
- Inspect air filter minder (diesel)
- Inspect tires for wear regularly and rotate every 10,000 km

## Service #3

- Change engine oil and replace oil filter
- Multi-point inspection
- Inspect air filter minder (diesel)
- Replace fuel filter (diesel)
- Inspect tires for wear regularly and rotate every 10,000 km
- Brake Service: inspect brake pads, shoes, rotors, drums, brake lines and hoses, and parking brake system
- Lubricate hinges, latches, locks, sliding door tracks and weather-stripping
- Clean sliding door electrical contacts (vans)
- Clean battery terminals
- Inspect engine cooling system and hoses (check coolant strength and secure clamps)
- Add coolant conditioner (diesel with green coolant only)
- Inspect wheels for end play or noise
- Check and lubricate steering, suspension, ball joints, drive shaft U-joints and slip yoke (if serviceable)
- Replace cabin/pollen air filter (if equipped)
- Replace "green" engine coolant every 36 months or 60,000 km (whichever occurs first)
- Replace "yellow" engine coolant at 60 months or 100,000 km (whichever occurs first) and then every 36 months or 60,000 km thereafter

#### Service #4

- Change engine oil and replace oil filter
- Multi-point inspection
- Inspect air filter minder (diesel)
- Replace fuel filter (except diesel)
- Inspect tires for wear regularly and rotate every 10,000 km
- Replace engine air filter and engine crank case filter
- Automatic transmission/transaxle service\*
- Inspect platinum spark plugs every 50,000 km†
- Replace non-platinum spark plugs every 50,000 km
- Replace manual transmission fluid every 100,000 km (light trucks, SUVs and Lincoln LS)
- Replace platinum spark plugs every 150,000 km
- Replace PCV valve at 150,000 km intervals
- Replace accessory drive belt every 200,000 km
- Replace front axle, rear axle and transfer case lubricant every 250,000 km\*\*

*These bundles apply to vehicles 1996 and newer. For vehicles 1995 and prior follow the "**Special Operating Conditions**" schedule (3 months/5,000 km maintenance interval).*

---